




Z32 Bellhousing Removal Instructions



1. Remove the front cover bolts and then the cover.

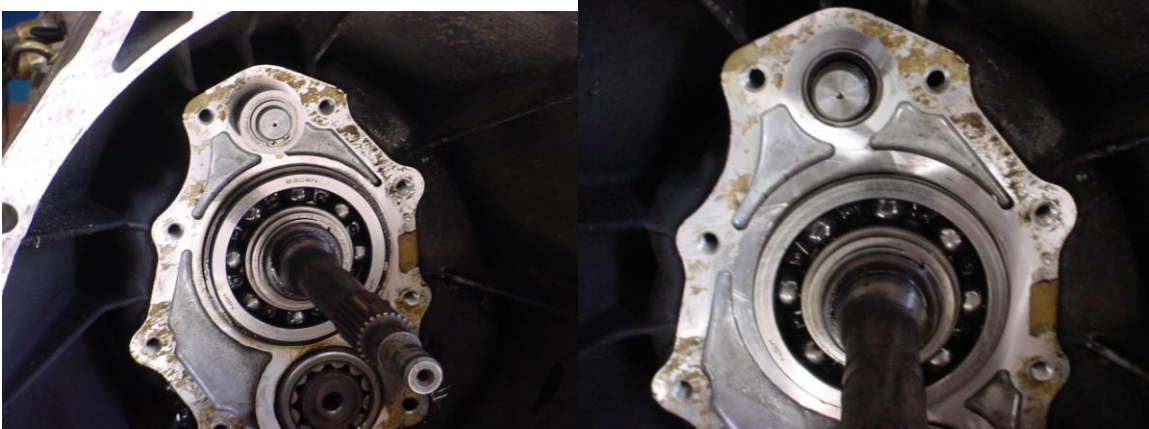

2. Remove the snap ring holding the washer on the shift rod and the c-clip around the front main bearing.



3. Remove the plate that holds the spring and ball on the side of the trans.



4. Stand the trans up and remove the bolts holding the two housings together. Then use a soft mallet to split the housings.



5. Once the housings are split, remove the thrust washer.

6. Please clean off the housing in a parts cleaner to remove most of the oil and dirt. This is the section of the trans that you would need to send to us.